



Connection with pipes

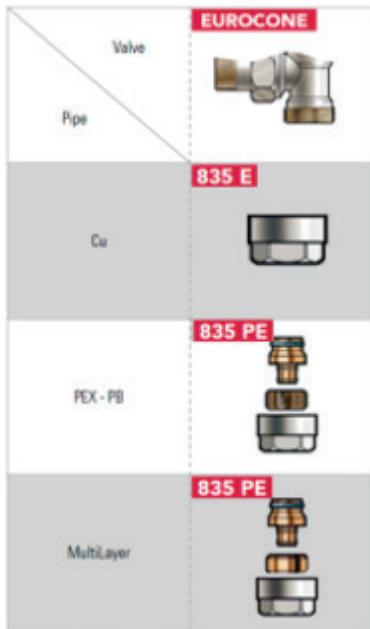

Hydraulic curves

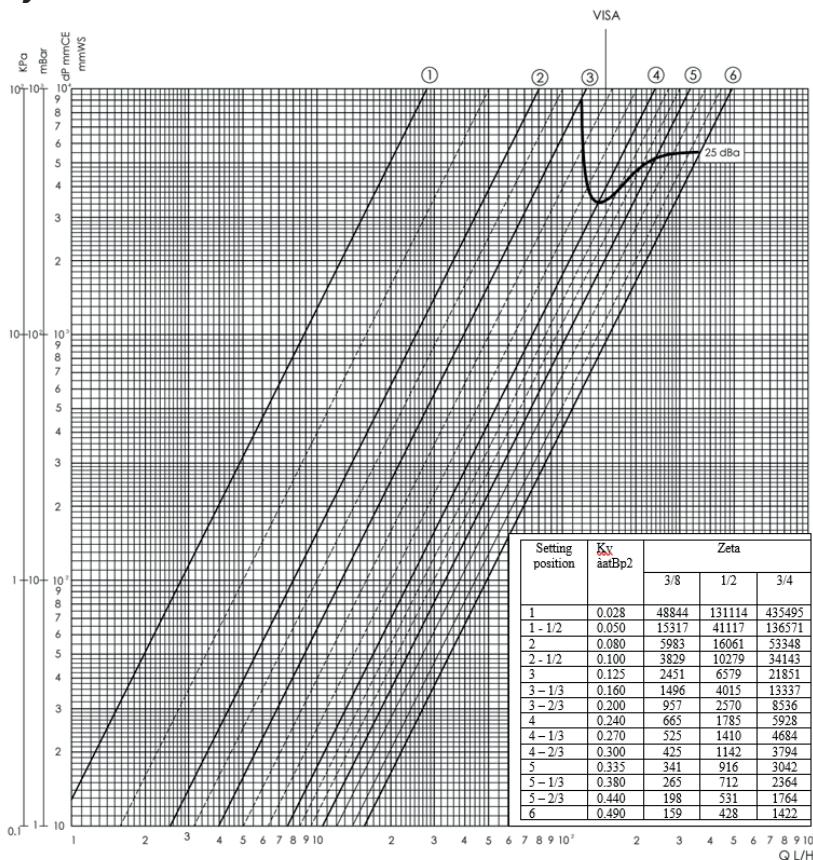

Kv setting principle

The presetting of the preset kv-valves should be done using a special tool (R583730). Place the tool onto the valve spindle and turn it to the desired value.

The value is indicated by an opening on the tool. It is also visible when the tool is removed; it is the position in front of the flat part of the spindle.

